



Hunkeler
UM8

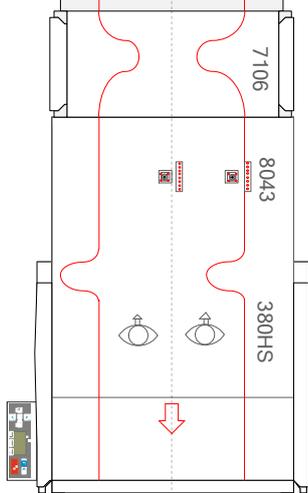

7106

8043

380HS

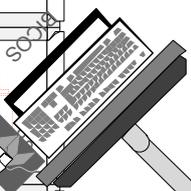

500

500

500

500

500

500

500

500

 
4806

5552/2


5552/1

501


ANV Arbeitsplatz wird
irgendwo am Auslauf
platziert. Kabel dafür lang
genug machen.



ANV/BDI

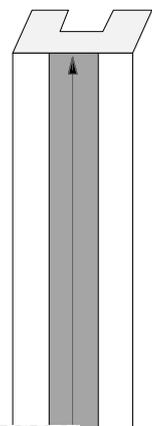


5640

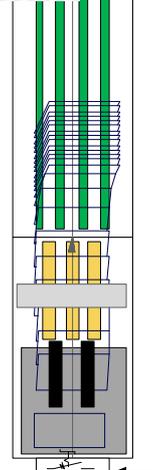

Netzschalter

Zuleitung SX10²

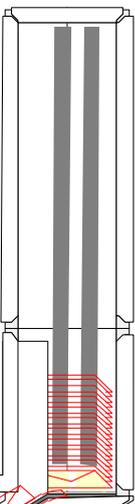

7512

5571

4507